



How To Use and Enjoy Your Coleman Kerosene Lantern models 201-700 & 201-720

WARNING:


THIS APPLIANCE CONSUMES OXYGEN. PROVIDE AMPLE VENTILATION. ADDITIONAL VENTILATION MUST BE PROVIDED FOR PERSONS AND OTHER FUEL BURNING APPLIANCES OCCUPYING THE SAME ENCLOSED AREA.

Cautions:


- 1. READ THESE INSTRUCTIONS CAREFULLY:
- 2. Never loosen or remove fuel cap while lantern is lighted or near open flame, (including pilot lights), excessive heat or while top of lantern is hot to touch.
- 3. Store fuel in a clean, properly marked, closed metal container away from open flame (including pilot lights) or excessive heat.
- 4. Never allow tents, sleeping bags, clothing or other combustible materials to come within two feet of the top and one foot on all sides of the lantern.
- 5. Do not operate lantern if mantle has a hole in it.
- 6. Do not use any device or part not expressly approved by
- The Coleman Company, Inc.
- 7. This lantern is designed as a lighting device only. Do not use in any manner not expressly approved by The Coleman Company, Inc. (such as cover with a bucket.)
- 8. Do not adjust light output with cleaning needle lever.
- 9. KEEP OUT OF THE REACH OF CHILDREN.





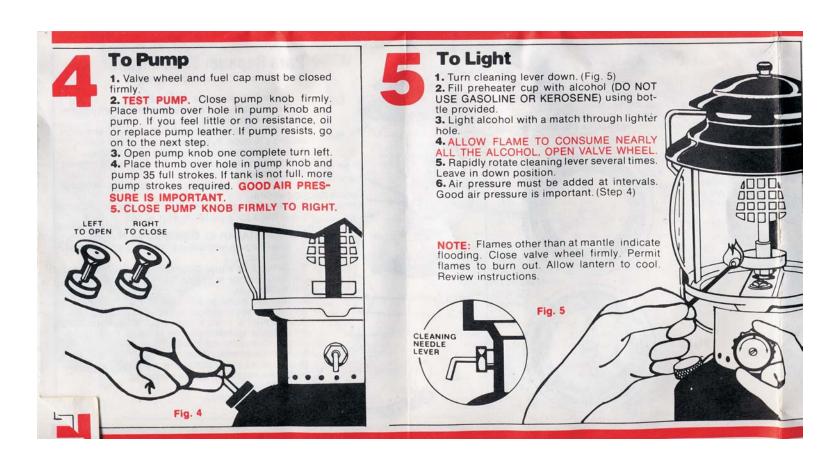



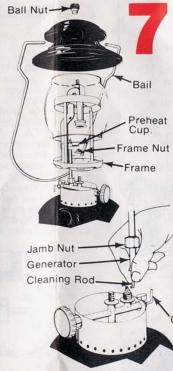

To Replace Generator

TO REMOVE OLD GENERATOR

1. Close valve wheel firmly.

2. Remove bail. Remove ball nut at top of lantern. Lift off top and remove globe.

3. Remove frame nut and lift off frame and preheat cup.

4. Turn cleaning lever up.

5. Unscrew jamb nut at lower end of generator.

6. Lift generator and unhook cleaning rod.

7. Remove jamb nut from old generator and save for use with new generator.

TO INSTALL NEW GENERATOR

1. Pull cleaning rod down about 1".

2. Place cleaning rod between thumb and forefinger and hook cleaning rod in hole of eccentric block.

3. Place generator in upright position and turn cleaning lever down.

4. Slide jamb nut over generator and tighten wrench tight. CAUTION: Be careful not to strip threads.


5. Reassemble lantern.


6. Visually check for leak immediately after lighting.


Cleaning Lever





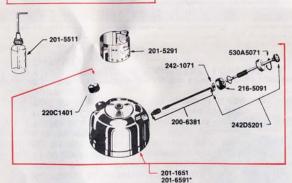

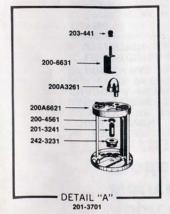

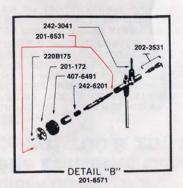

Parts List for Coleman Lantern models 201-700 & 201-720

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
21A3101 200-4231 200-4561 200-6631 200-6631 200A6621 201-1651 201-2181 201-2381 201-3241 201-3701 201-5101 201-5291 201-5511 201-5891 201-6531	(21A) Mantle Bail Lock Nut Check Valve & Stem Ventilator Bracket "U" Tube and Venturi Burner Frame Ass'y. Fount Ass'y. Direction Disc. Gas Tip (Marked TD) Needle, Generator Burner Tube Burner Ass'y. Ventilator Preheater Cup Base Rest Alcohol Bottle Generator Valve Stem Ass'y.	220B175 220C1401 231A311 242-1071 242-3041 242-3231 242-6201 242D5201 407-6491 426-426 530A5071 605-210 690A051 690-066	Self Tapping Screw Fuel Cap Clip, Preheater Cup Push-on Nut Eccentric Block Burner Cap & Screen Valve Stem Packing Pump Plunger Valve Wheel Frame Nut Pump Cap Clip Jamb Nut (550) Clear Pyrex Globe (550A) Amber Pyrex Globe (Accessory)
201-6571 202-3531 203-441 216-5091	Fuel Valve (Complete) Tip Cleaner Stem Ball Nut Pump Cup	*For Mode 200-6491 200B4841 201-6591	Valve Wheel, Red

Coleman Lantern Accessories



LANTERN HANGER, 220-720, for use with any bail handle lantern.



FILTERING FUNNEL, 199B1111. aluminum with strainer and filtering fabric. Removes water, dirt, impurities from fuel. Replacement Filter 199-1091.

Other Coleman Products

COLEMAN Modern living demands modern proportions. Voted exactly right by thousands of discriminating customers. Insulated with urethane foam and featuring new recessed chrome-plated handles. Cam-type latch with protective shield locks with a twist of the wrist, can't be jarred open—can't be locked accidentally. Rugged Snow-Lite used in a seamless interior and rust-proof base.





MODEL 513A708 CATALYTIC HEATER. Here's the safe way to provide comfortable heat in tents, trailers, campers, duckblinds, ice fishing huts and hundreds of other areas where heat is needed. Two different models ranging from 3,000 to 8,000 BTU's approximate input. Lets you increase or decrease heat as needed.

MODEL 413G499 CAMP STOVE. Join the fun! Select your favorite model and enjoy delicious food everywhere—and for less cost than restaurant meals. Coleman Camp Stoves fold like a suitcase, cook like a range, and cook meals for days on a tank of Coleman fuel. Available in two- or three-burner models. Also available, Coleman Camp Oven: lets you bake to perfection anywhere, and Teflon Griddle for stove-top artistry.



WARNING:

THIS APPLIANCE CONSUMES OXYGEN.PROVIDE AMPLE VENTILATION. ADDITIONAL VENTILATION MUST BE PROVIDED FOR PERSONS AND OTHER FUEL BURNING APPLIANCES OCCUPYING THE SAME ENCLOSED AREA.

Cautions:

- 1. READ THESE INSTRUCTIONS CAREFULLY.
- 2. Never loosen or remove fuel cap while lantern is lighted or near open flame, (including pilot lights), or while top of lantern is hot to the touch.
- 3. Store fuel in a clean, properly marked, closed metal container away from open flame, (including pilot lights) or excessive heat.
- 4. Never allow tents, sleeping bags, clothing or other combustible materials to come within two feet of the top and one foot on all sides of the lantern.
- 5. Do not operate lantern if mantle has a hole in it.
- 6. Do not use any device or part not expressly approved by The Coleman Company, Inc.
- 7. This lantern is designed as a lighting device only. Do not use in any manner not expressly approved by The Coleman Company, Inc. (such as cover with a bucket.)
- 8. Do not adjust light output with cleaning lever.
- 9. KEEP OUT OF THE REACH OF CHILDREN.

Things You Should Know:

- **1.** The length of service you get from your lantern and generator depends greatly upon the cleanliness of the fuel you use. Always use clean, fresh white kerosene. Store your kerosene in a clean closed metal can that is air-tight and leak-proof.
- 2. Carry spare Coleman mantle.
- 3. If lantern is stored, refill annually with fresh fuel.
- 4. Oil pump leather periodically to keep it soft and pliable.
- **5.** If necessary to write the service center or the factory, reter to your lantern as a model 201. If you mail the lantern, send it without glass and ventilator to avoid breakage.
- 6. If lantern fails to operate satisfactorily, refer to directory packaged with product for list of Coleman service centers.